




PERMA-BOOT®

HIGH PERFORMANCE ROOF FLASHING

GETTING STARTED

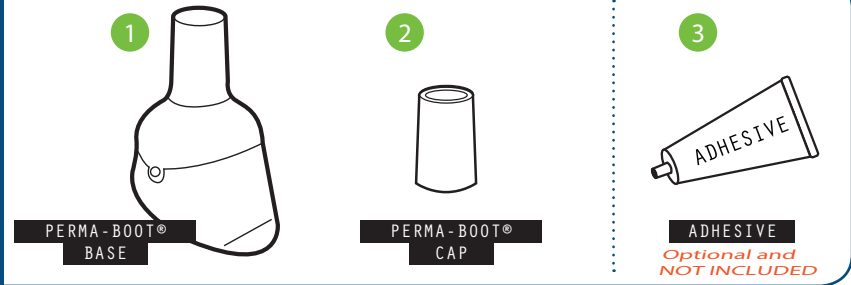

HELPFUL TIPS

- 1
- 2
- 3

Please note the hinge is only necessary for installation, it provides no structural strength after the product is in place.

If your PVC pipe moves downward while installing the boot, you may need to pull the pipe up while sliding the boot down so that the boot stays in contact with the roof.

The Perma-Boot will work on pipes 9 -13.5 inches in height from roof deck. Shorter or longer pipes may require modification of the pipe. Additional installation videos may be found on our video channel.


Questions?

Call (919) 662-9894

PERMA-BOOT.COM

*Optional adhesive may be used in high wind areas. Quality roofing adhesives or silicone based adhesives are recommended.

INSTALLATION INSTRUCTIONS

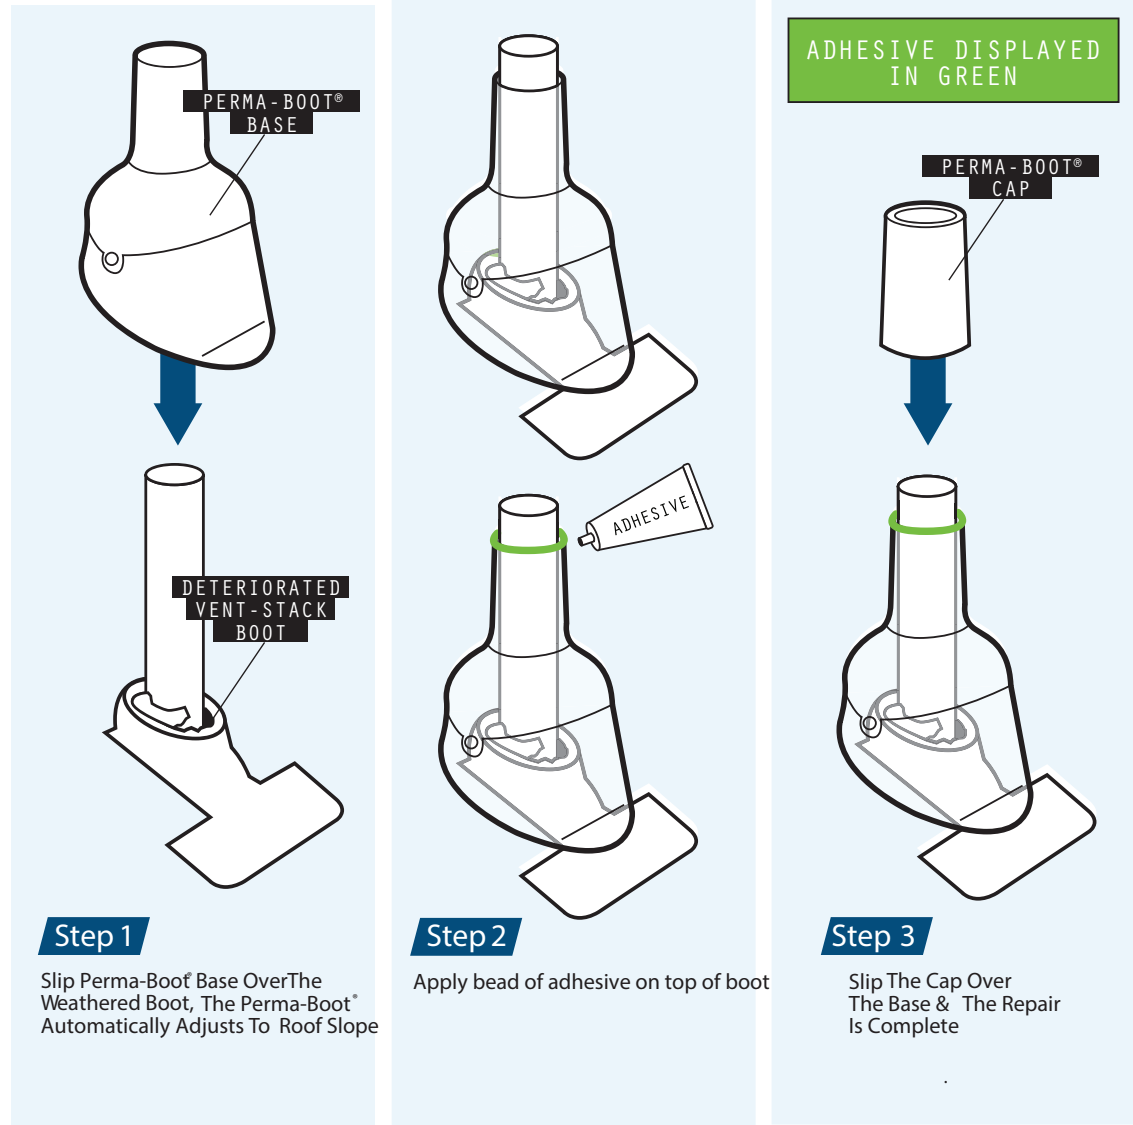

Step 1

Slip Perma-Boot Base Over The Weathered Boot, The Perma-Boot® Automatically Adjusts To Roof Slope

Step 2

Apply bead of adhesive on top of boot

Step 3

Slip The Cap Over The Base & The Repair Is Complete